


Install the front board to the leg from the back and into the leg.

These bolts are fastened from underside to slats with a socket wrench

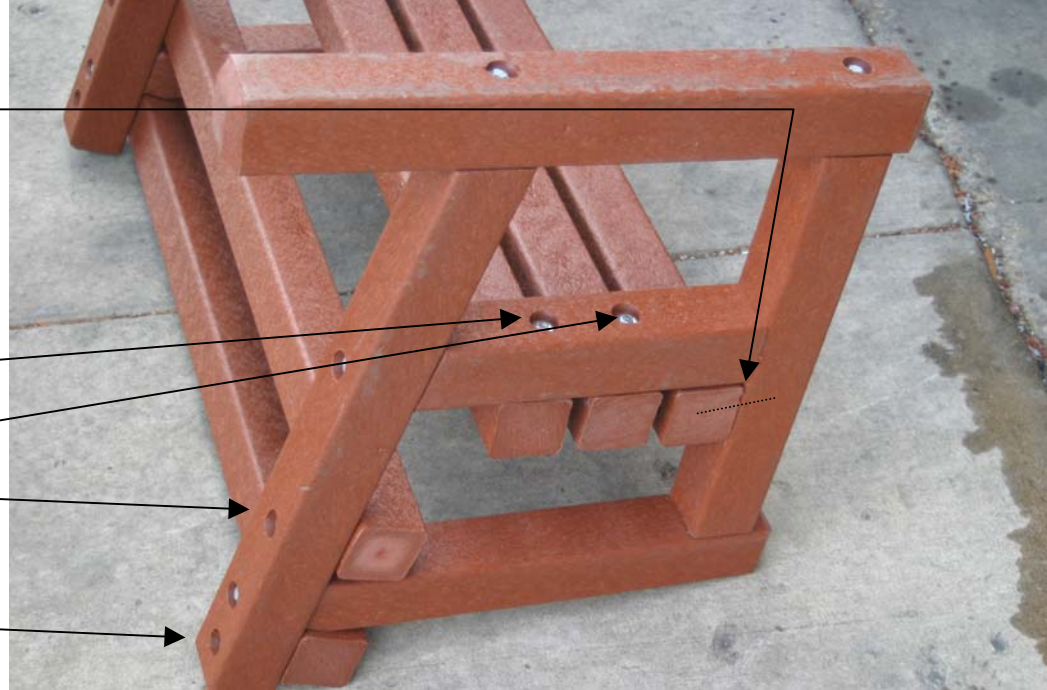

Repeat for the other side and you are done. 5 lag bolts per side.

